

MAINTENANCE

Basic maintenance should be performed every 500 shots, or as needed. A list of currently approved maintenance procedures can be found at www.byrna.com/maintenance. For any service not listed please contact customer service. The Byrna features a 1-year limited factory warranty that may be voided if unauthorized service is attempted, the device is modified, or used with unauthorized projectiles or unauthorized gas cartridges. For factory service please contact Byrna Customer Service at info@byrna.com or visit www.byrna.com/service to obtain a return authorization number prior to shipping your device.

⚠ WARNING Always remove CO₂ cartridge and magazine and clear breach before performing any maintenance.

USING BYRNA OILER KIT (SOLD SEPARATELY)

STEP 1 First, be certain to wear appropriate eye protection. Next, follow the instructions on page 7 to confirm the safety is engaged, on page 9 to confirm CO₂ is removed, on page 17 to confirm the breach is cleared.

STEP 2 Install oiling guide into the CO₂ chamber.

STEP 3 Remove cap from oiling tool.

STEP 4 Insert oiling tool into CO₂ chamber.

STEP 5 Squeeze oil bottle very gently to dispense 2-3 drops of oil. Do not over oil.

STEP 6 Lastly, follow the instructions on page 18 to operate the launcher. Operating the launcher immediately after oiling allows air to force oil through the entire device. This step can be performed without firing any projectiles if preferred (ie with an empty magazine); however, be certain to observe all warnings and safety measures.

